


Drill Bits

Dowel bit



Twist bit

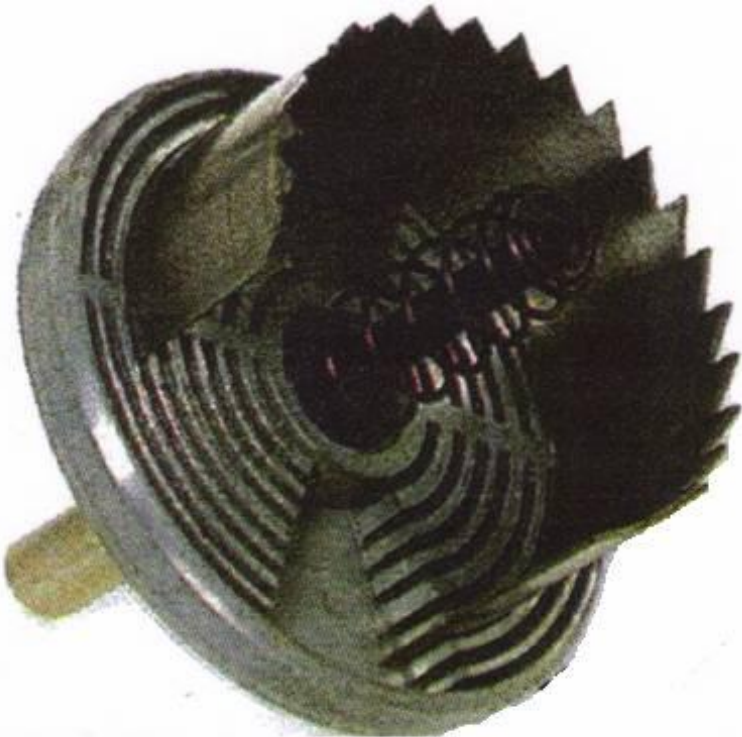

Hole saw

- Auger Bit : Ideal for drilling large deep holes eg. Fitting a door lock
- Ideally this drill should only be used in a bit and brace because the threaded centre pulls the bit into the wood



- Forstner bit : these bore clean flat bottomed holes and they do not deflect with knots or grain



- Plug cutter:



Rose Head countersink



- Drill & counter bore



Drill and counter sink



Screwdrivers



Self-grip screwdriver

Cross-head screwdriver

Ratchet screwdriver

Cabinet screwdriver

Cabinet screwdriver

Heavy-duty screwdriver

Offset screwdriver

Stubby screwdriver

Spiral ratchet screwdriver



Offset Screwdriver
allows to reach screws
in confined spaces
(mixer kitchen taps)



Stubby Screwdriver
Chunky handle gives
good leverage
in confined spaces




Ratchet Screwdriver
Can be used fixed or
with ratchet on allows
you to drive screw
without turning handle


Spiral ratchet Screwdriver
it drives screws in much faster
than ordinary screwdrivers

This model is called the Yankee

The first type of
screw head
was a slot head

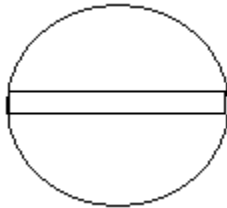

Followed by a
Philips Head

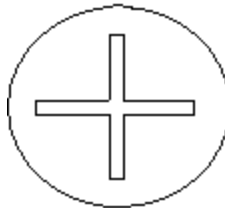

With the invention of screw guns the Pozi head
was invented.

With the square tip there
was less chance of the
screw head ringing

